
shelvingdirect.com

ASSEMBLY INSTRUCTIONS PALLET RACK SHELVING UNIT

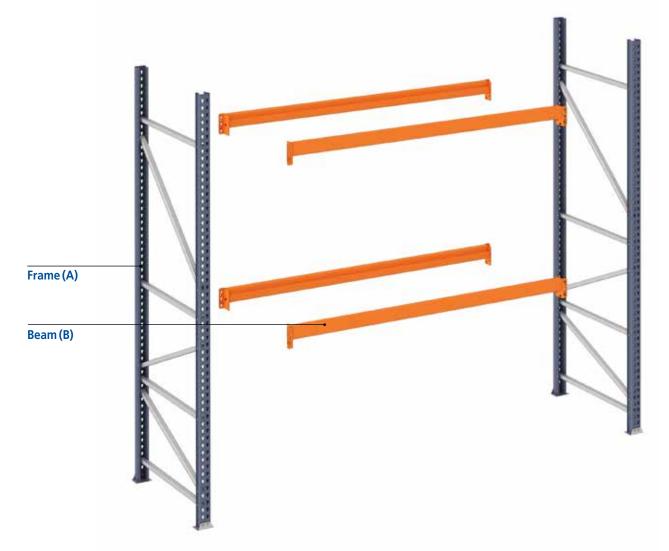






shelvingdirect.com - Tel. 1-800-500-9141



2

The beams are fitted with a locking system (C) to prevent them from moving.

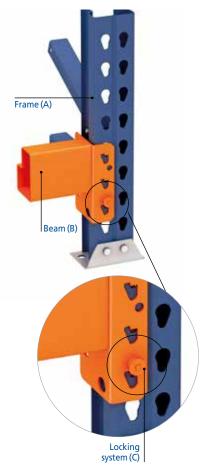

4

Follow the procedure described in the previous step to position the intermediate beams.

If there are more than two levels, follow the procedure described in Step 1 starting with the upper levels.

